Assembly & Startup Instructions for Well Water Systems
Acid Neutralizing with Flow Through Tank Head

1. Media Loading Instructions

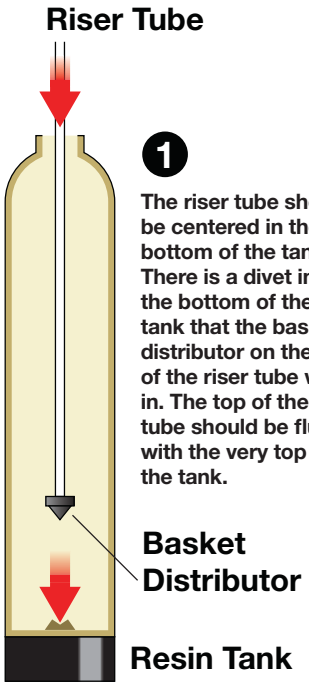

1

The riser tube should be centered in the bottom of the tank. There is a divet in the bottom of the tank that the basket distributor on the end of the riser tube will fit in. The top of the riser tube should be flush with the very top of the tank.

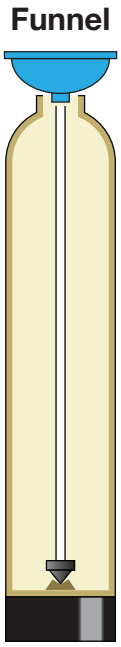

2

Use a piece of tape to cover the riser tube while adding media to the tank. You do not want any media getting into the riser tube. Place the funnel in opening at the top of the tank. Pour media into the tank using the funnel.

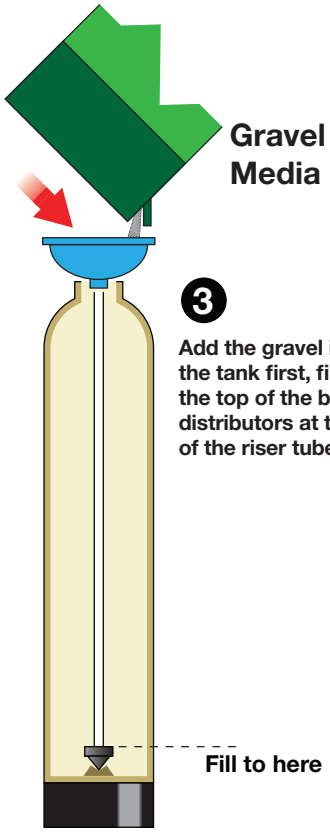

3

Add the gravel into the tank first, filling to the top of the basket distributors at the end of the riser tube.

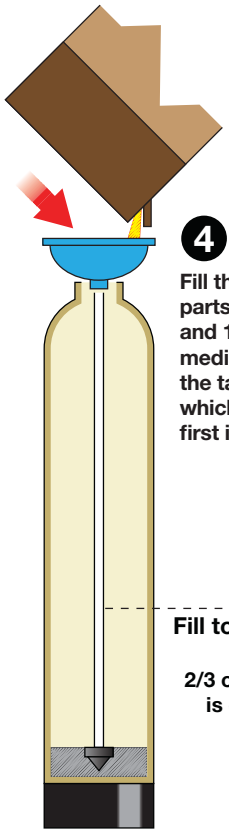

4

Fill the tank with 4 parts Calcite media and 1 part FloMag media up to 1/3 of the tank. The order of which media goes in first is not important.

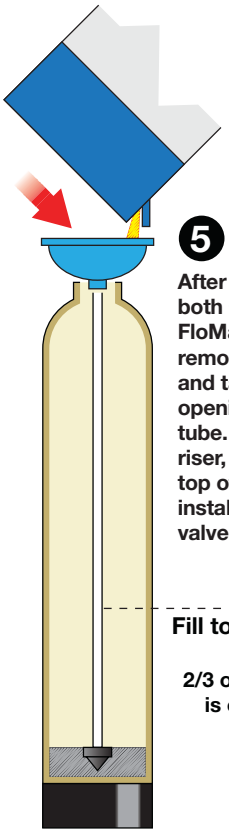

5

After filled with the both Calcite and FloMag media, remove the funnel and tape covering the opening of the riser tube. Clean up the riser, tank threads and top of the tank before installing the control valve.

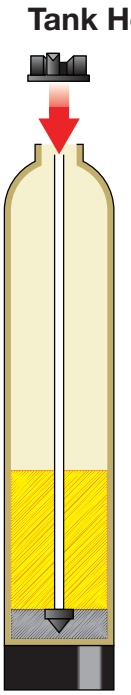

6

Thread the tank head on to the top of the tank. The head should thread on easily. If you feel any abnormal resistance, check to make sure the head is not cross threaded.

The system is now assembled and ready for installation.